




Torque King Electric RTR RC Monster Truck Front Wheel Suspension Replacement

This guide gives steps on how to replace the two front wheel suspensions.

Written By: Maximiliano Cortes

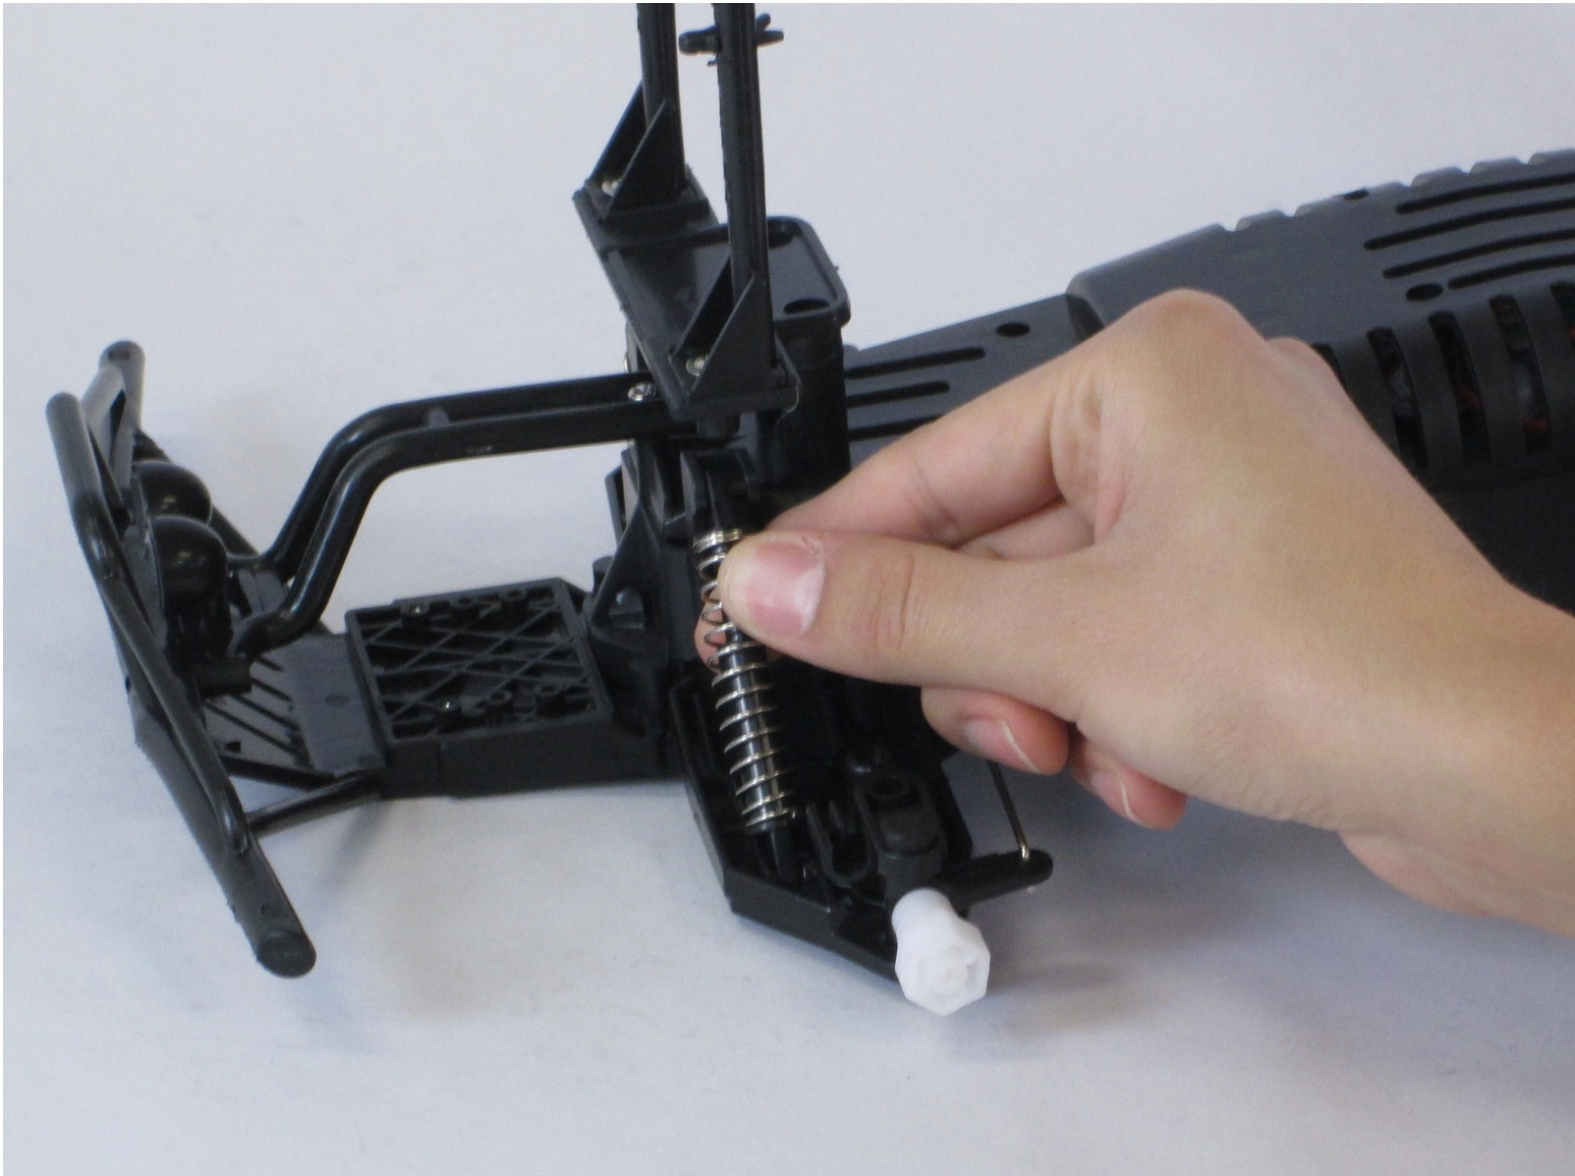

INTRODUCTION

This guide requires removing the casing and front wheels.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Casing




- From the top view, remove each of the four pins that hold the casing in place.

Step 2




- Slowly pull the casing up to remove it.

Step 3 — Removing Screws

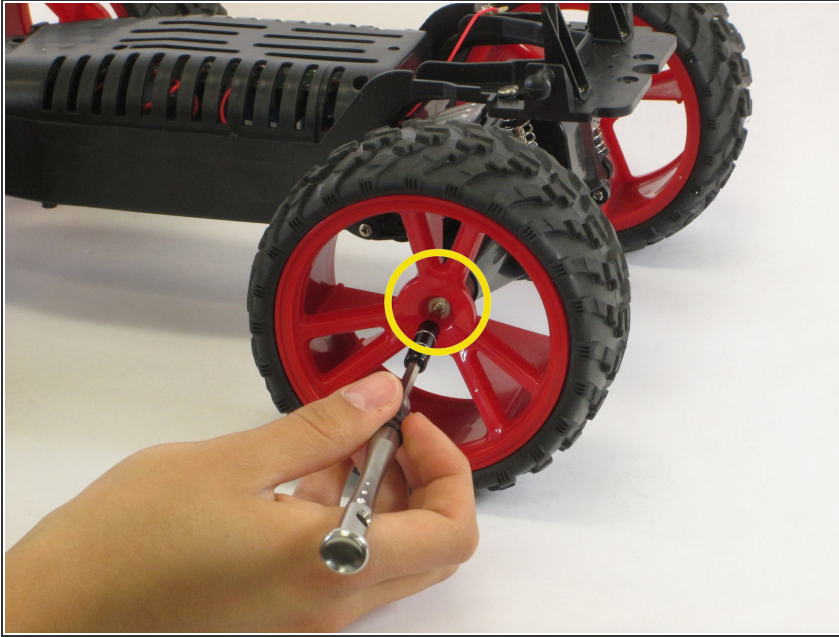


- Using a Phillips 1 screwdriver, completely unscrew the 8mm screw located in the center of the wheel. Repeat this step for other wheels if needed.

Step 4 — Removing the Wheel

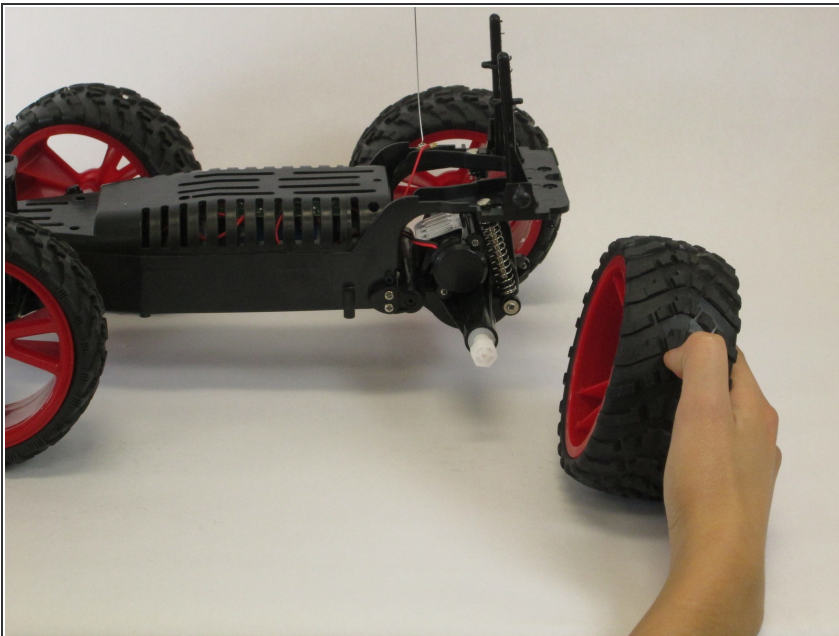


- Carefully pull the wheel off of its axle. Repeat for other wheels as necessary.

Step 5 — Front Wheel Suspension

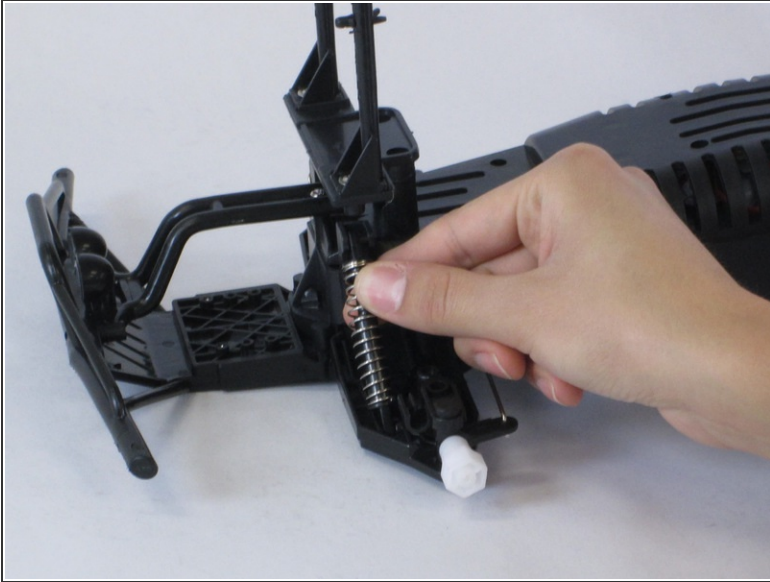



- Pull the top half of the suspension to unclip it.

Step 6

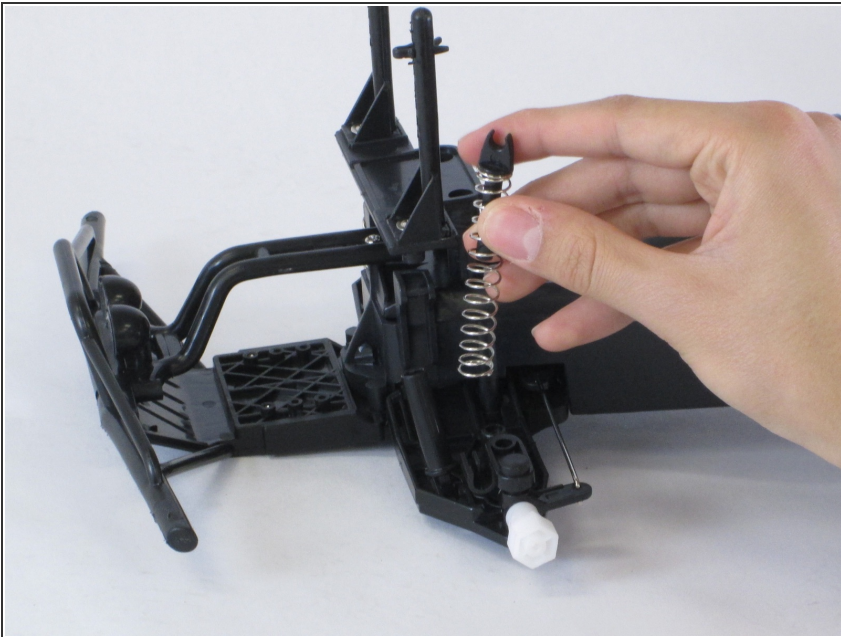

- Remove the top clip along with the spring.

Step 7

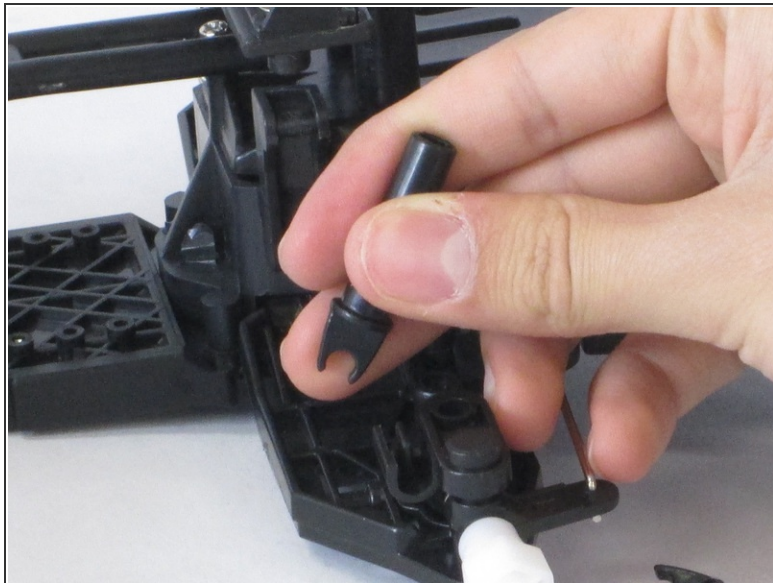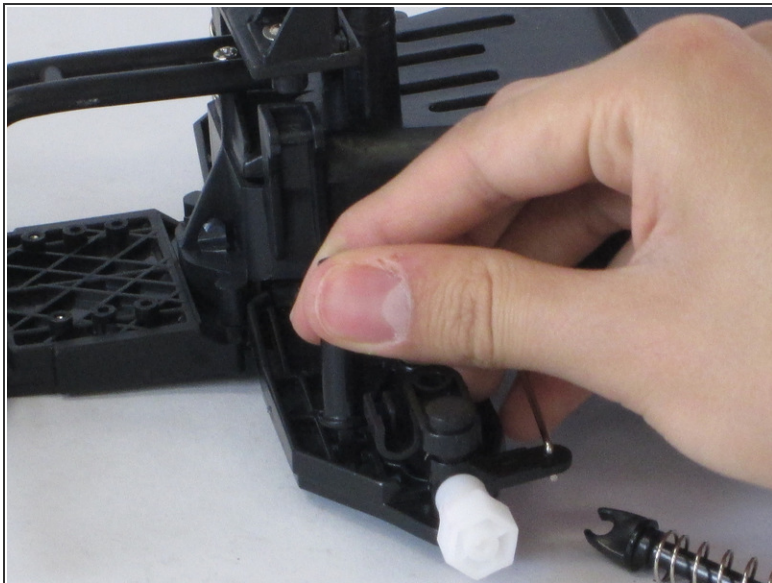

- Pull up the bottom half of the suspension to unclip it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:45:56 PM.